


Model MD Parts List

IMPORTANT: When ordering repair parts, be sure to indicate cushion model and size, serial number and part number on purchase order to avoid errors.

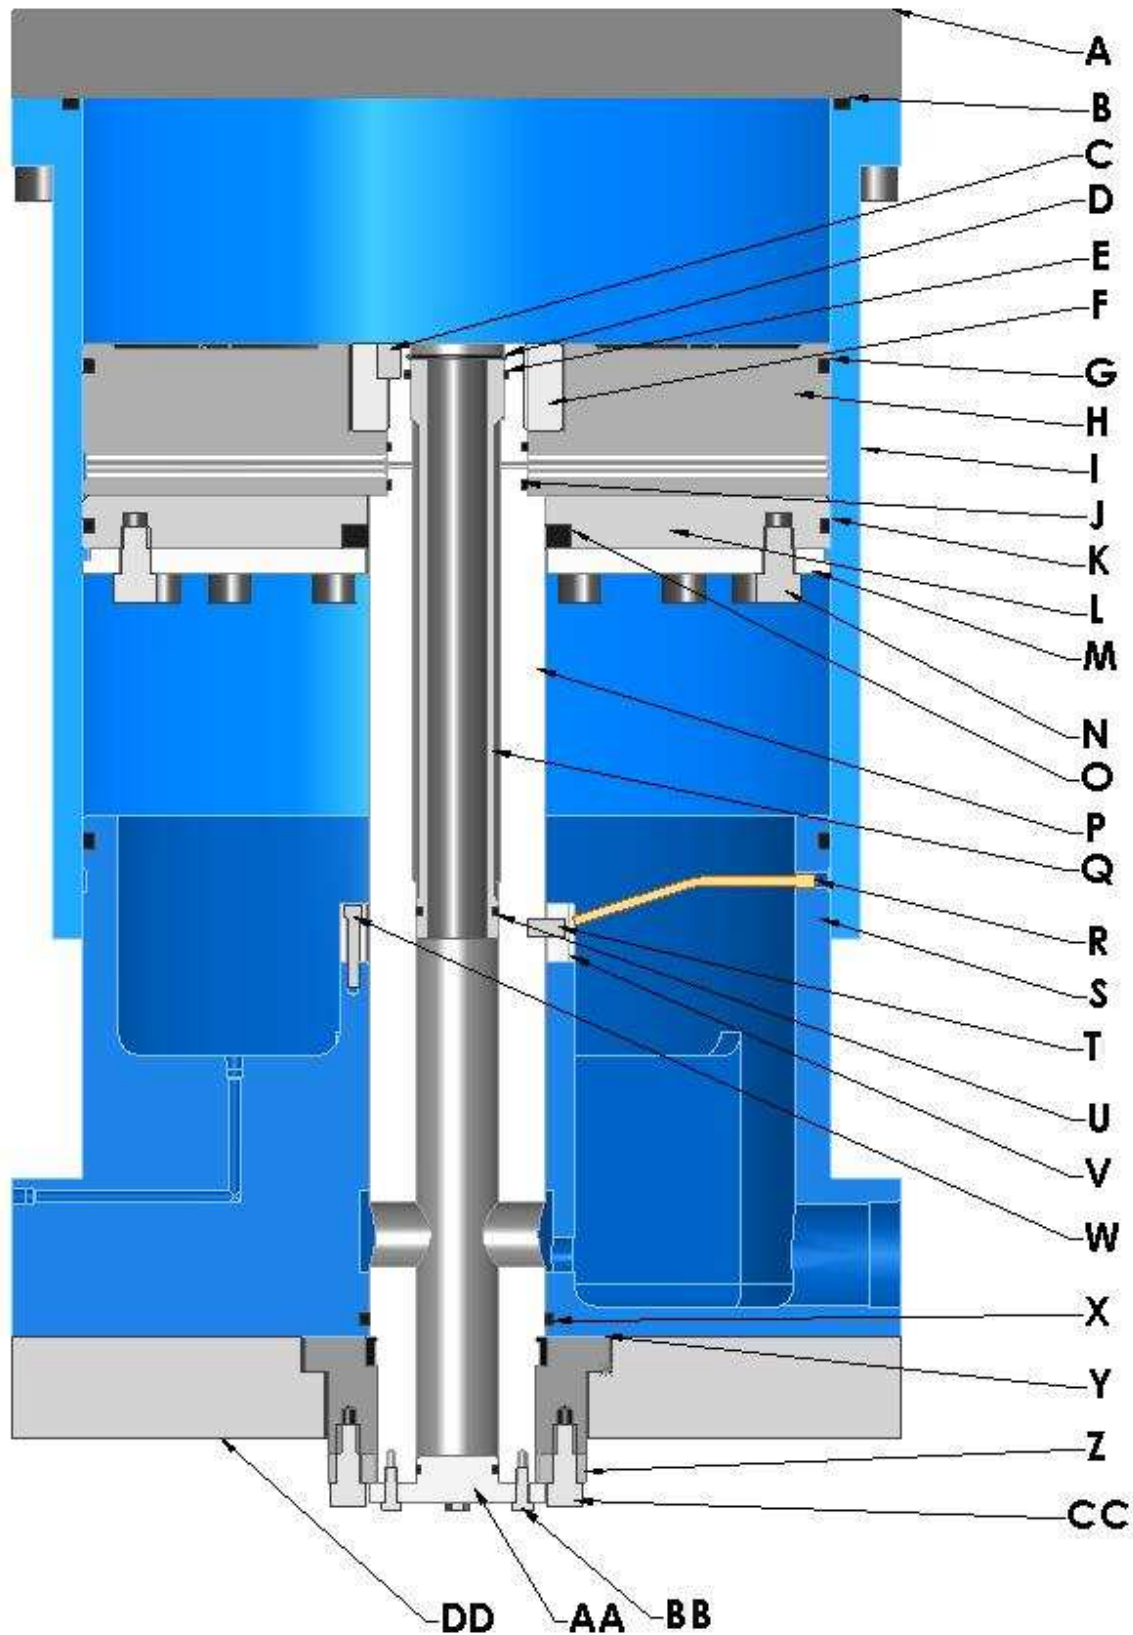

Model MD Parts List

DESCRIPTION		CYLINDER DIAMETER AND PART NUMBER				
		8"	10"	12"	14"	16"
PBM Pin Pad	A	418	418	418	418	418
BPM Pin Pad		8982	7550	8788	8797	8969
"O" Ring	B	8987	10737	7884	8972	10110
Soc. Hd. Set Screw	C	3889	2889	2889	3018	3018
Retaining Ring	D	3473	3473	3473	10873	10873
"O" Ring	E	10412	10412	10412	6490	6490
Piston Nut	F	-	-	-	10785	10785
Quad Ring	G	8335	8700	10109	9878	10110
Upper Piston ^(a)	H	8983	7685	8789	8793	8970
Cylinder Weldment ^(a)	I	8981	7549	7687	8798	8968
"O" Ring	J	6161	6161	6161	6162	6162
"O" Ring	K	6156	6157	6158	10086	6159
Cylinder Separator Plate	L	8984	7748	8790	8795	8971
Lock Plate	M	8985	7686	8791	8796	8974
Soc. Hd. Cap Screw	N	7879	11455	11455	11456	11456
"U" Packing	O	7882	7882	7882	8973	8973
Piston Rod	P	12427	12357	12357	12415	12446
Lubrication Tube	Q	12366	12366	12366	12416	12445
Lubrication Set	R	1134	1134	1134	1134	1134
Lower Piston ^(a)	S	12405	12384	12361	12414	12448
Dowel, Ant. Rotation	T	12576	12576	12576	12576	12576
"O" Ring	U	2723	2723	2723	6146	6146
Anti-Rotation Collar	V	12912	12362	12362	12417	12417
Soc. Hd. Cap Screw	W	3058	3058	3058	3058	3058
Quad Ring	X	8698	8698	8698	12027	12027
Adjustment Nut	Y	12365	12365	12365	12418	12418
Lock Plate	Z	12364	12364	12364	12419	12419
Plug	AA	12911	12911	12911	12911	12911
Soc. Hd. Cap Screw	BB	3391	3391	3391	3391	3391
Soc. Hd. Cap Screw	CC	1291	1291	1291	1291	1291
Support Plate	DD	12473	12386	12367	12420	12447

(a) When ordering cylinders and cushion pistons, order according to cushion model and serial number (Serial Number is located at the front, lower flange of the cushion unit)